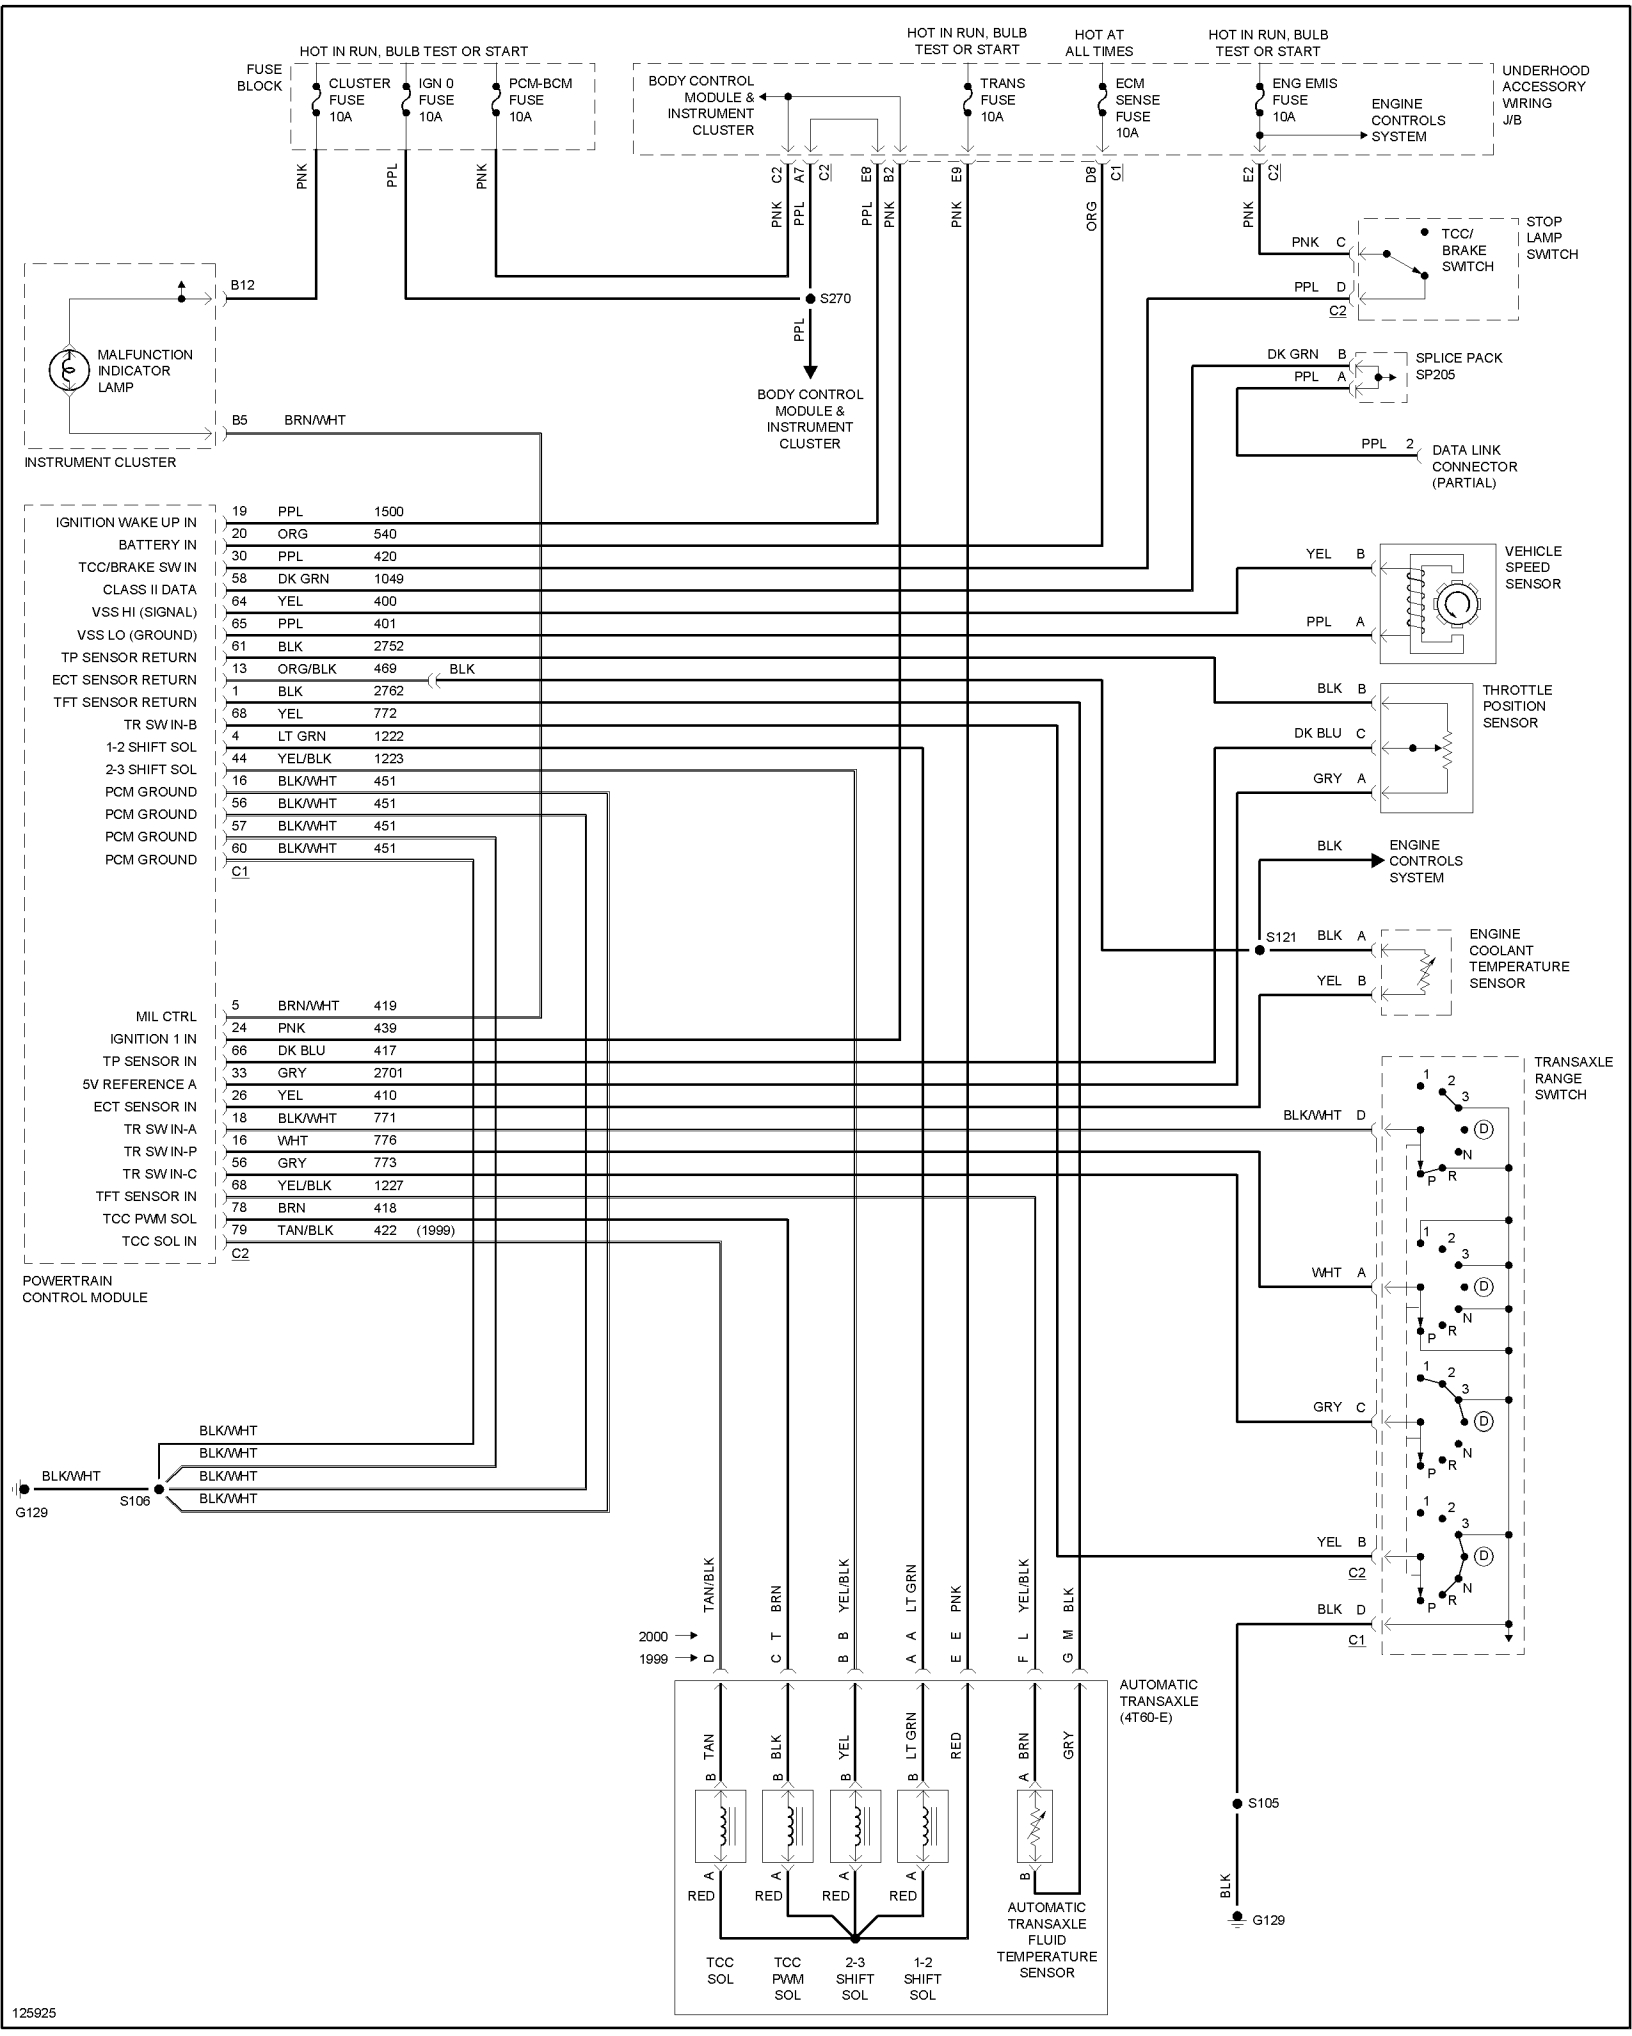
HOT IN RUN, BULB TEST OR START
FUSE BLOCK
CLUSTER FUSE 10A
IGN 0 FUSE 10A
PCM-BCM FUSE 10A
HOT IN RUN, BULB TEST OR START
HOT AT ALL TIMES
HOT IN RUN, BULB TEST OR START
BODY CONTROL MODULE & INSTRUMENT CLUSTER
TRANS FUSE 10A
ECM SENSE FUSE 10A
ENG EMIS FUSE 10A
ENGINE CONTROLS SYSTEM
UNDERHOOD ACCESSORY WIRING J/B
PNK
PPL
PNK
C2 A7
C2
E8 B2
E9
D8 C1
E2 C2
STOP LAMP SWITCH
TCC/ BRAKE SWITCH
PNK C
PPL D
C2
B12
S270
PPL
BODY CONTROL MODULE & INSTRUMENT CLUSTER
MALFUNCTION INDICATOR LAMP
INSTRUMENT CLUSTER
B5 BRN/WHT
DK GRN B
PPL A
SPLICE PACK SP205
PPL 2
DATA LINK CONNECTOR (PARTIAL)
IGNITION WAKE UP IN 19 PPL 1500
BATTERY IN 20 ORG 540
TCC/BRAKE SW IN 30 PPL 420
CLASS II DATA 58 DK GRN 1049
VSS HI (SIGNAL) 64 YEL 400
VSS LO (GROUND) 65 PPL 401
TP SENSOR RETURN 61 BLK 2752
ECT SENSOR RETURN 13 ORG/BLK 469
TFT SENSOR RETURN 1 BLK 2762
TR SW IN-B 68 YEL 772
1-2 SHIFT SOL 4 LT GRN 1222
2-3 SHIFT SOL 44 YEL/BLK 1223
PCM GROUND 16 BLK/WHT 451
PCM GROUND 56 BLK/WHT 451
PCM GROUND 57 BLK/WHT 451
PCM GROUND 60 BLK/WHT 451
C1
BLK
YEL B
PPL A
VEHICLE SPEED SENSOR
BLK B
DK BLU C
GRY A
THROTTLE POSITION SENSOR
BLK
ENGINE CONTROLS SYSTEM
S121
BLK A
YEL B
ENGINE COOLANT TEMPERATURE SENSOR
MIL CTRL 5 BRN/WHT 419
IGNITION 1 IN 24 PNK 439
TP SENSOR IN 66 DK BLU 417
5V REFERENCE A 33 GRY 2701
ECT SENSOR IN 26 YEL 410
TR SW IN-A 18 BLK/WHT 771
TR SW IN-P 16 WHT 776
TR SW IN-C 56 GRY 773
TFT SENSOR IN 68 YEL/BLK 1227
TCC PWM SOL 78 BRN 418
TCC SOL IN 79 TAN/BLK 422 (1999)
C2
POWERTRAIN CONTROL MODULE
TRANSAXLE RANGE SWITCH
BLK/WHT D
WHT A
GRY C
YEL B
C2
BLK D
C1
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
BLK/WHT
G129
S106
2000
1999
TAN/BLK D
BRN C T
YEL/BLK B B
LT GRN A A
PNK E E
YEL/BLK F L
BLK G M
AUTOMATIC TRANSAXLE (4T60-E)
B TAN
B BLK
B YEL
B LT GRN
RED
A BRN
GRY
A RED
A RED
A RED
A RED
B
TCC SOL
TCC PWM SOL
2-3 SHIFT SOL
1-2 SHIFT SOL
AUTOMATIC TRANSAXLE FLUID TEMPERATURE SENSOR
S105
BLK
G129
125925