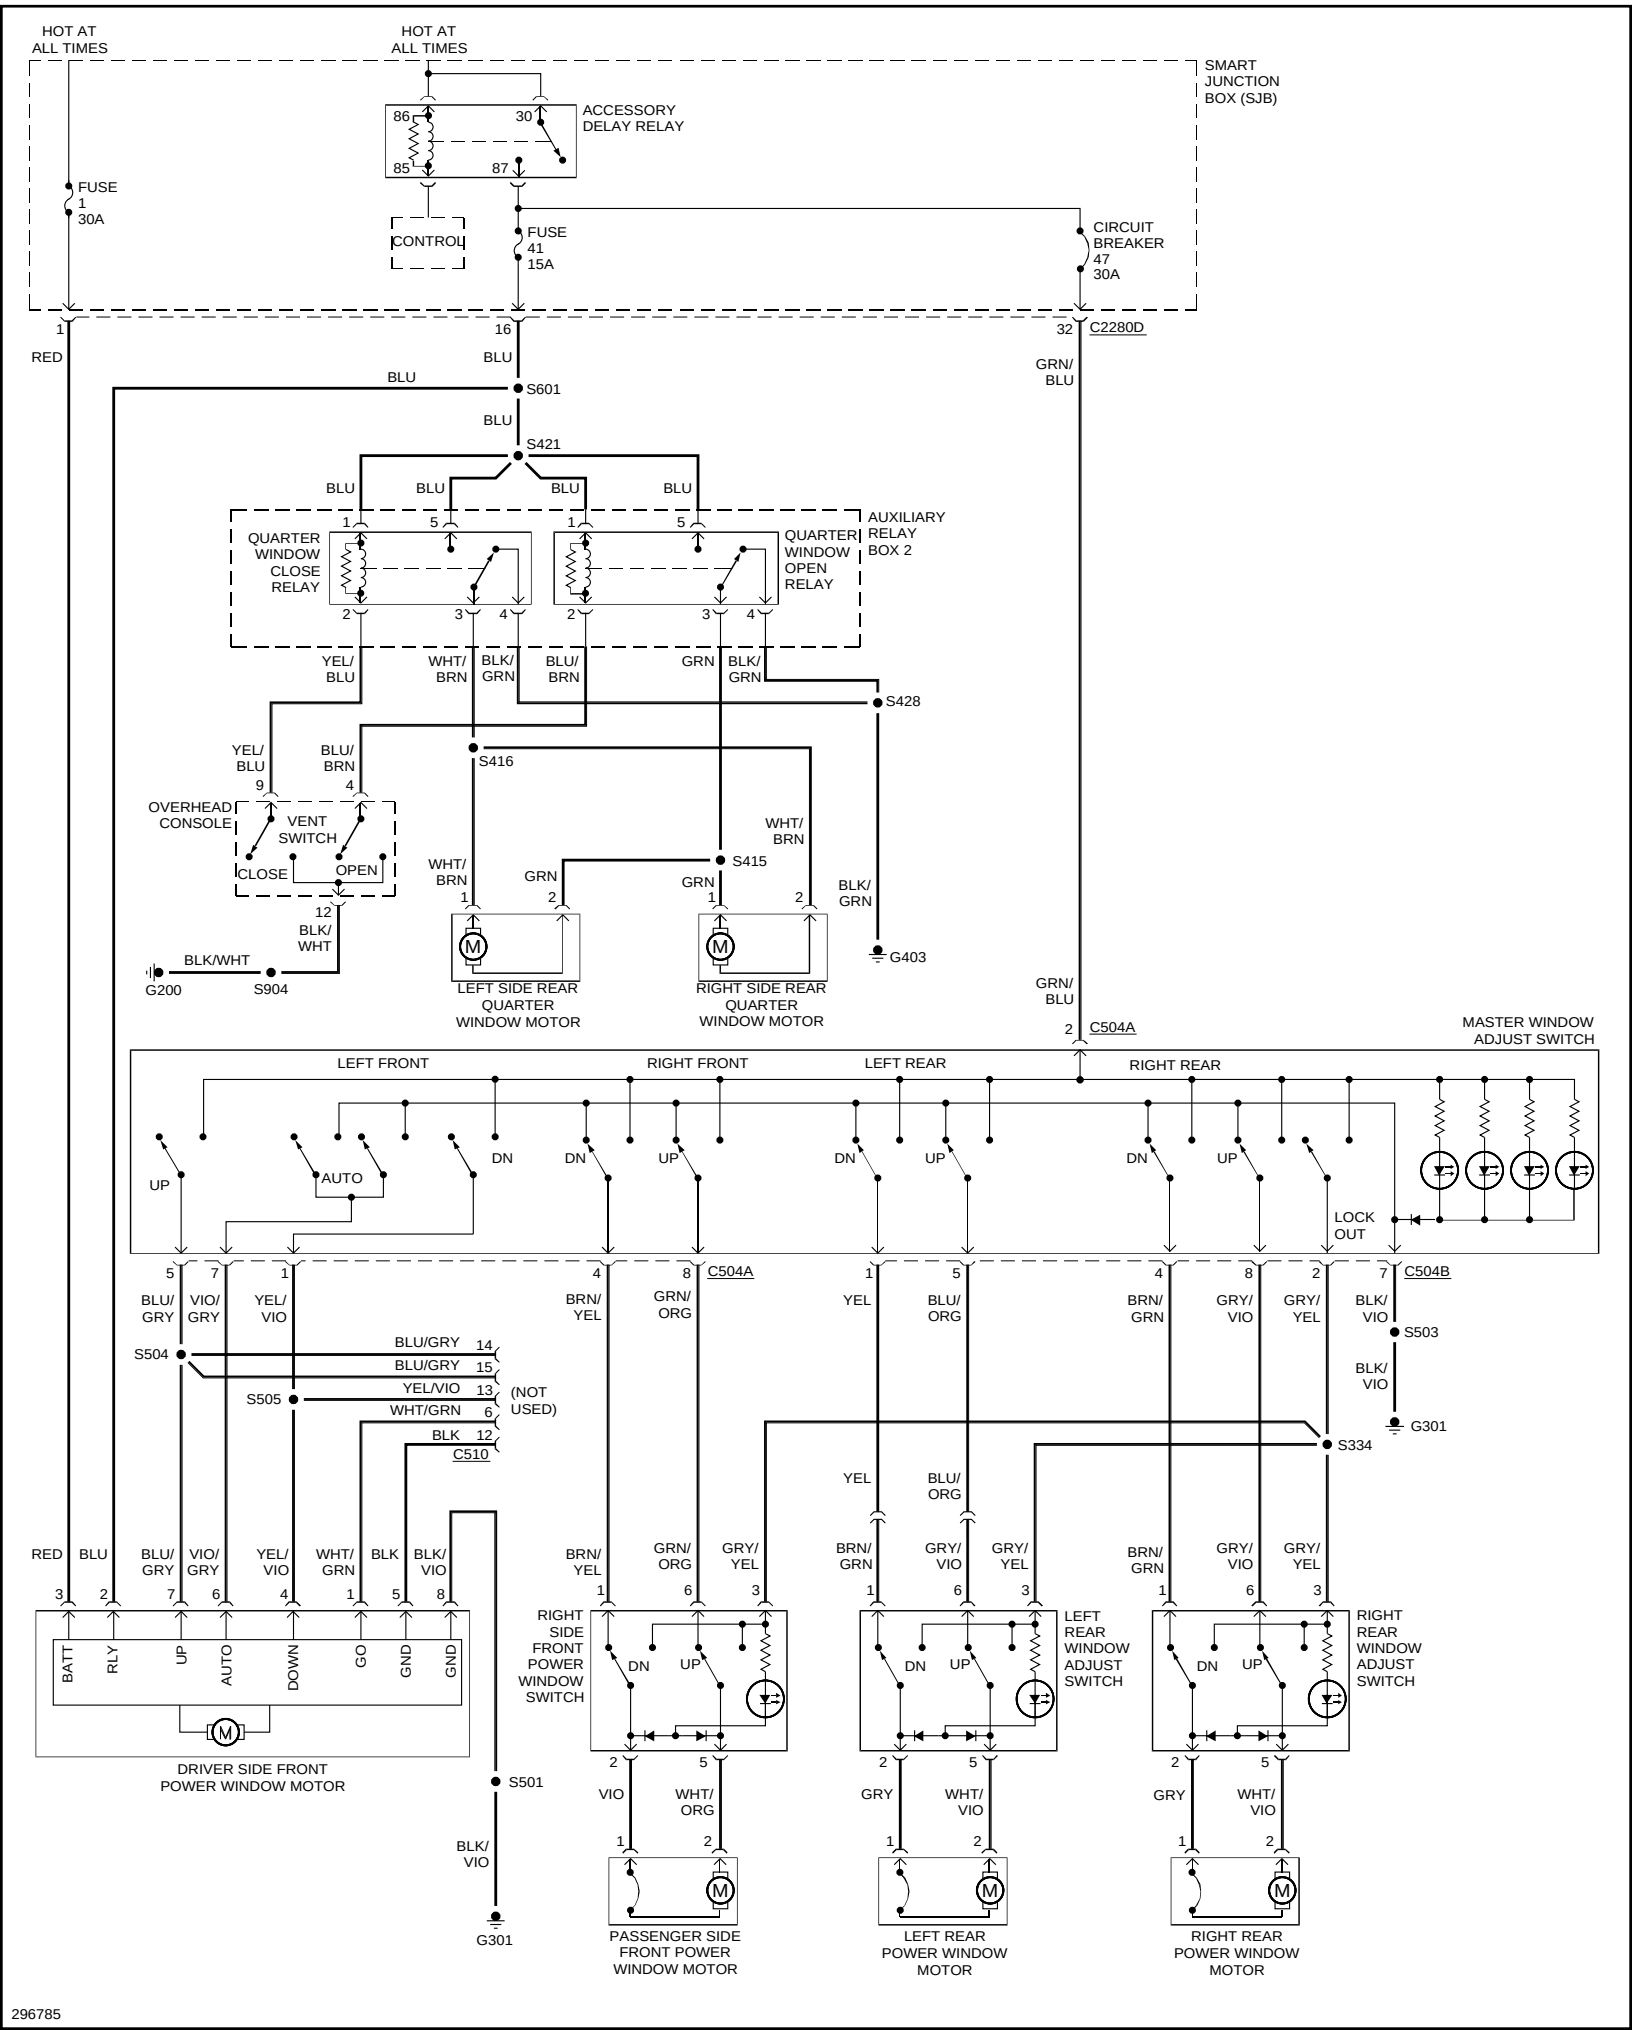
HOT AT ALL TIMES
HOT AT ALL TIMES
SMART JUNCTION BOX (SJB)
ACCESSORY DELAY RELAY
86
30
85
87
FUSE 1 30A
CONTROL
FUSE 41 15A
CIRCUIT BREAKER 47 30A
1
16
32
C2280D
RED
BLU
BLU
S601
BLU
S421
GRN/ BLU
BLU
BLU
BLU
BLU
QUARTER WINDOW CLOSE RELAY
QUARTER WINDOW OPEN RELAY
AUXILIARY RELAY BOX 2
YEL/ BLU
WHT/ BRN
BLK/ GRN
BLU/ BRN
GRN
BLK/ GRN
S428
YEL/ BLU
BLU/ BRN
S416
OVERHEAD CONSOLE
VENT SWITCH
CLOSE
OPEN
WHT/ BRN
S415
WHT/ BRN
GRN
GRN
BLK/ GRN
12
BLK/ WHT
BLK/WHT
G200
S904
LEFT SIDE REAR QUARTER WINDOW MOTOR
RIGHT SIDE REAR QUARTER WINDOW MOTOR
G403
GRN/ BLU
C504A
MASTER WINDOW ADJUST SWITCH
LEFT FRONT
RIGHT FRONT
LEFT REAR
RIGHT REAR
UP
AUTO
DN
DN
UP
DN
UP
DN
UP
LOCK OUT
BLU/ GRY
VIO/ GRY
YEL/ VIO
BRN/ YEL
GRN/ ORG
C504A
YEL
BLU/ ORG
BRN/ GRN
GRY/ VIO
GRY/ YEL
BLK/ VIO
C504B
S503
BLK/ VIO
G301
S504
BLU/GRY
BLU/GRY
YEL/VIO
WHT/GRN
BLK
S505
(NOT USED)
C510
S334
YEL
BLU/ ORG
RED
BLU
BLU/ GRY
VIO/ GRY
YEL/ VIO
WHT/ GRN
BLK
BLK/ VIO
BRN/ YEL
GRN/ ORG
GRY/ YEL
BRN/ GRN
GRY/ VIO
GRY/ YEL
BRN/ GRN
GRY/ VIO
GRY/ YEL
BATT
RLY
UP
AUTO
DOWN
GO
GND
GND
RIGHT SIDE FRONT POWER WINDOW SWITCH
LEFT REAR WINDOW ADJUST SWITCH
RIGHT REAR WINDOW ADJUST SWITCH
DRIVER SIDE FRONT POWER WINDOW MOTOR
S501
VIO
WHT/ ORG
GRY
WHT/ VIO
GRY
WHT/ VIO
BLK/ VIO
G301
PASSENGER SIDE FRONT POWER WINDOW MOTOR
LEFT REAR POWER WINDOW MOTOR
RIGHT REAR POWER WINDOW MOTOR

296785